


EZ FIT PLEATED BLIND FITTING INSTRUCTIONS

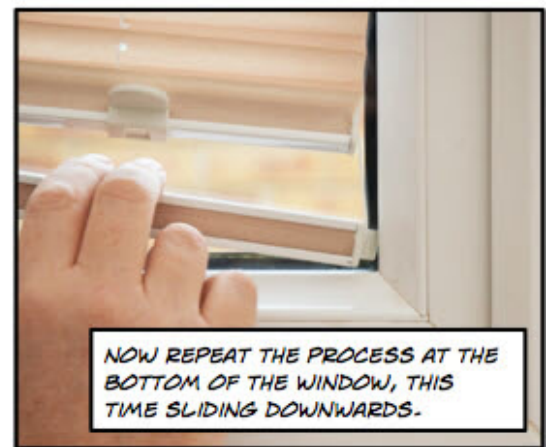

TENSIONING THE BLINDS

Your blinds should have been tensioned to the correct size at the factory. The cord which runs through the blind needs to be under tension on the spring in the bottom rail for the blind to stay in position and may on occasions need adjusting.

To alter the tension on the blinds, with the blind fitted to the window locate the spring which is in the bottom rail. To operate correctly and hold the blind in any position there needs to be tension on this spring. To alter the tension untie the cord from one side of the spring (one side should have been left with a longer 'tail' this will be the easiest side to untie). Then simply move the cord along until there is tension on the spring and re tie it. Excess cord may now be trimmed off.