


Fitting your Freehanging Pleated Blind

Fixing the brackets

Your blind will have been supplied with the correct number of brackets to suit its size

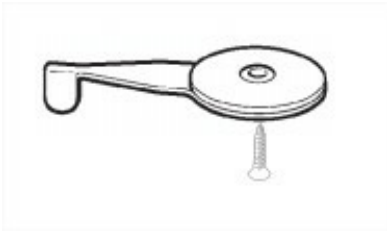

Top Fixing Brackets

Drill 2 brackets to the lintel or ceiling at least 25mm (1") from the window frame and at least 70mm (2 3/4") from each end of the blind. Any remaining brackets should be fitted at equal distances between these two brackets



Face Fixing Brackets

Fit to the window frame as close as possible to the lintel or ceiling with the same spacing as for top fix brackets

Fitting the Track

Your blind needs to be fitted with the control cords facing the front. Turn the lever on the blind so that the 2 metal projections below the brackets line up with the slot in the top of the headrail. Locate these projections into the headrail, ensure that the cords within the headrail are clear of the brackets and lock the headrail into place by turning the levers anti-clockwise

Operating your Blind

To lower the blind. Hold the control, cord in a vertical position and pull it gently towards the centre of the blind to release the cord locking mechanism. Keep hold of the cord and allow the blind to drop to the desired position. To lock the cord into place pull it to the side of the blind.

FOR FURTHER ADVICE OR ASSISTANCE PLEASE CONTACT
Tel 0800 098 8823 or 01733 592012 Email

