


Fitting your Freehanging Pleated Blind

Fixing the brackets

Your blind will have been supplied with 4 or 6 fixing brackets depending on its size

Top Fixing Brackets

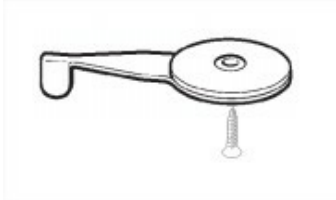

Drill 2 pilot holes at the top and bottom of internal recess of the window least at least 25mm (1") from glass and at least 70mm (2 3/4") from each end of the blind and fix the swivel brackets into place by screwing through the hole in the centre. (For wider blinds with 6 brackets fit the other 2 brackets on the centres at the top and bottom of the window opening

Fitting the Tracks

Turn the lever on the bracket so that the 2 projections on the bracket line up with the slot in the headrails. Locate these projections into the headrail, ensure that the cords within the headrail are clear of the brackets and lock the headrails into place by turning the levers anti-clockwise

The friction cord, which runs through the blind is connected by a spring located in the bottom rail of the blind. The cord should have been adjusted to the correct length during manufacture. Fitting the lower track into the brackets should stretch the spring which applies friction to the cord.

If, for any reason, the friction cords are too loose or too tight they can be adjusted easily. . Release the rail at the bottom of the opening and undo one of the knots which joins the cord to the spring (You will see that the cord on one side of the spring has been left longer to make this easier). Re-tie the knot in the position which allows the middle rail to move up and down easily and remain in any position on the window.

Once fitted and tensioned correctly remove any excess cord

Operating your Blind

Operating the blind is simply a case of moving the middle rail of the blind using the handle to the desired position. Always try to open and close the blind with the rails parallel to each other to minimise wear and avoid damaging the cords.

**FOR FURTHER ADVICE OR ASSISTANCE PLEASE CONTACT
Tel 0800 098 8823 or 01733 592012 Email**

